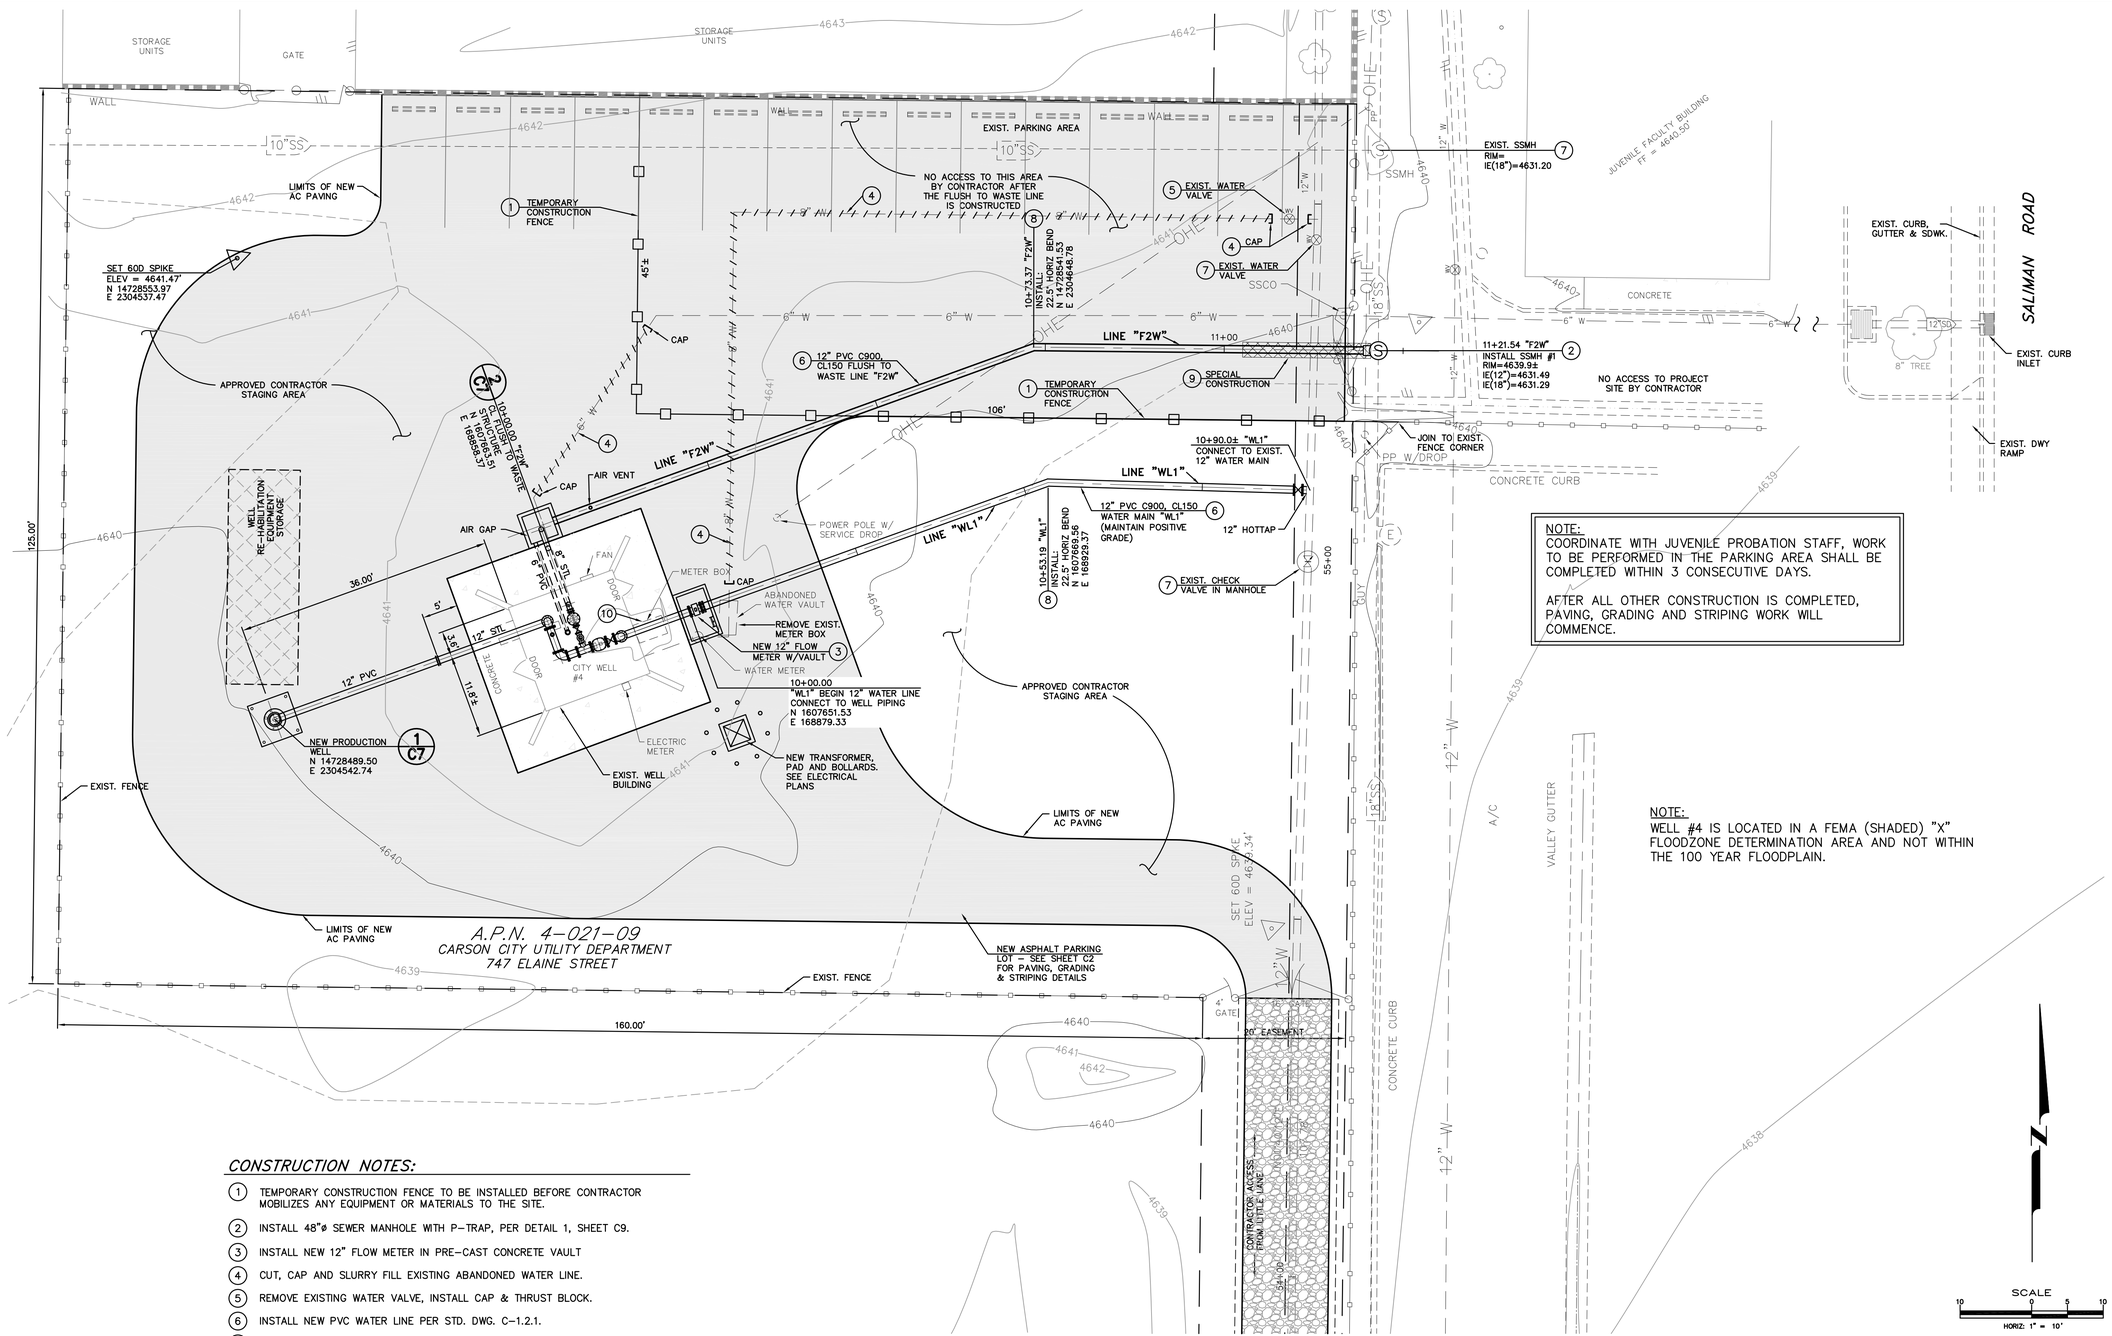

CONSTRUCTION NOTES:

1. TEMPORARY CONSTRUCTION FENCE TO BE INSTALLED BEFORE CONTRACTOR MOBILIZES ANY EQUIPMENT OR MATERIALS TO THE SITE.
2. INSTALL 48"ø SEWER MANHOLE WITH P-TRAP, PER DETAIL 1, SHEET C9.
3. INSTALL NEW 12" FLOW METER IN PRE-CAST CONCRETE VAULT
4. CUT, CAP AND SLURRY FILL EXISTING ABANDONED WATER LINE.
5. REMOVE EXISTING WATER VALVE, INSTALL CAP & THRUST BLOCK.
6. INSTALL NEW PVC WATER LINE PER STD. DWG. C-1.2.1.
7. PROTECT-IN-PLACE
8. INSTALL LINE LOCATION BOX & LID PER STD DWG C-1.2.2
9. CENTER NEW 20' LONG PVC DRAIN LINE SECTION ON EXISTING UTILITY CROSSING, INSTALL "MEGALUG" MECHANICAL RETAINER GLANDS AT EACH END CONNECTION. AND INSTALL MECHANICAL RETAINER GLANDS ON ANY EXPOSED WATER MAIN JOINTS.
10. DEMO & REMOVE EXISTING METER BOX, RETURN EXISTING METER TO CARSON CITY PUBLIC WORKS.

SITE PLAN

SCALE: 1"=10'

Call before you Dig
Avoid cutting underground utility lines. It's costly.
Call 811 OR 1-800-227-2600

DESIGNED BY: DR/MB
DRAWN BY: DR & DO
CHECKED BY: MB
DWG NO.: 4-0621BS1.DWG
SCALE (HORIZ): NOTED
SCALE (VERT): NA
PLOT DATE: 1-11-10

CARSON CITY
PUBLIC WORKS DEPARTMENT
3505 BUTTI WAY CARSON CITY, NEVADA 89701
PH: 887-2355 FAX: 887-2112

PROFESSIONAL ENGINEER — STATE OF NEVADA
MARK BRETHAUER
Exp: 12/31/10
CIVIL
No. 10102

REV.	DATE	DESCRIPTION	BY	APP'D

CARSON CITY PRODUCTION WELL #4 REMODEL & PIPING MODIFICATIONS

PROJECT No. 4.0621

SITE PLAN

SHEET C1 OF 17